

## Compatibility list of the Windows operating systems and SIMATIC optional packages with versions of the STEP 7 basic package

Legend:

X	=	combination permitted
-	=	combination not permitted
(-)	=	combination not tested

### Notes:

- This list (possibly a more up to date version) is available on the Internet at: <http://support.automation.siemens.com/WW/view/en/18734363>
- All statements regarding compatibility relate to the installation and combined running of the software on the same PC/programming device
- **Statements regarding compatibility with a STEP 7 version also apply to the service packs for this version unless restrictions are explicitly stated.** (Example: The statements regarding compatibility with STEP 7 V5.4 also apply to STEP 7 V5.4+SP1, ...)
- **Statements regarding compatibility with an S7 optional package also apply to the service packs for this version unless restrictions are explicitly stated.** (Example: The statements regarding compatibility with CFC V7.1 also apply to CFC V7.1+SP1, ...)
- The Microsoft Windows operating systems are abbreviated in the table below as follows:
  - Win 2000 SP4           Microsoft Windows 2000 Professional Edition + Service Pack 4
  - Win XP SP1            Microsoft Windows XP Professional Edition + Service Pack 1 or Service Pack 1a
  - Win XP SP2            Microsoft Windows XP Professional Edition + Service Pack 2
  - Win XP SP3            Microsoft Windows XP Professional Edition + Service Pack 3
  - Win 2003               Microsoft Windows Server 2003 Standard Edition as workstation
  - Win 2003 SP1           Microsoft Windows Server 2003 + Service Pack 1 Standard Edition with or without R2 as workstation
  - Win 2003 SP2           Microsoft Windows Server 2003 + Service Pack 2 Standard Edition with or without R2 as workstation
  - Vista                   Microsoft Windows Vista 32bit Ultimate or Business
  - Vista SP1               Microsoft Windows Vista 32bit + Service Pack 1 Ultimate or Business
  - Win 7                    Microsoft Windows 7 32bit Ultimate or Professional
  - Win 7 SP1               Microsoft Windows 7 32bit + Service Pack 1 Ultimate or Professional
  - Win 7 (64)              Microsoft Windows 7 64bit Ultimate or Professional
  - Win 7 SP1 (64)         Microsoft Windows 7 64bit + Service Pack 1 Ultimate or Professional
  - Win 2008 R2 (64)       Microsoft Windows Server 2008 R2 64bit Std. Edition
  - Win 2008 R2 SP1 (64)  Microsoft Windows Server 2008 R2 64bit + Service Pack 1 Std. Edition

STEP 7 Basic Packages			Microsoft Windows Operating Systems														
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win XP SP3	Win 2003	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
STEP 7	V5.5 SP4	6ES7 810-4CC10-0YA5	-	-	-	(-)	-	-	X <sup>1)</sup>	-	-	(-)	X	X	X	X	X
STEP 7	V5.5 SP3	6ES7 810-4CC10-0YA5	-	-	X	X	-	-	X <sup>1)</sup>	-	-	X	X	X	X	X	X
STEP 7	V5.5 SP2	6ES7 810-4CC10-0YA5	-	-	X	X	-	-	X <sup>1)</sup>	-	-	X	X	X	X	X	X
STEP 7	V5.5 SP1	6ES7 810-4CC10-0YA5	-	-	X	X	-	-	X <sup>1)</sup>	-	-	X	X	X	X	X	X
STEP 7	V5.5	6ES7 810-4CC10-0YA5	-	-	X	X	-	-	X	(-)	(-)	X	-	-	-	-	-
STEP 7	V5.4 SP5	6ES7 810-4CC08-0YA5	-	-	X	X	-	-	X	X	X	-	-	-	-	-	-
STEP 7	V5.4 SP4	6ES7 810-4CC08-0YA5	-	-	X	X	-	-	X	X	X	-	-	-	-	-	-
STEP 7	V5.4 SP3.1	6ES7 810-4CC08-0YA5	X	-	X	-	-	-	X	X	-	-	-	-	-	-	-
STEP 7	V5.4 SP3	6ES7 810-4CC08-0YA5	X	-	X	-	-	-	X	X	-	-	-	-	-	-	-
STEP 7	V5.4 SP2	6ES7 810-4CC08-0YA5	X	X	X	-	X	X	X	-	-	-	-	-	-	-	-
STEP 7	V5.4 SP1	6ES7 810-4CC08-0YA5	X	X	X	-	X	X	-	-	-	-	-	-	-	-	-
STEP 7	V5.4	6ES7 810-4CC08-0YA5	X	X	X	-	X	X	-	-	-	-	-	-	-	-	-
STEP 7 Professional	2010 SR3	6ES7 810-5CC11-0YA5	-	-	X	X	-	-	X <sup>1)</sup>	-	-	X	X	X	X	X	X
STEP 7 Professional	2010 SR2	6ES7 810-5CC11-0YA5	-	-	X	X	-	-	X <sup>1)</sup>	-	-	X	X	X	X	X	X
STEP 7 Professional	2010 SR1	6ES7 810-5CC11-0YA5	-	-	X	X	-	-	X <sup>1)</sup>	-	-	X	X	X	X	X	X
STEP 7 Professional	2010	6ES7 810-5CC11-0YA5	-	-	X	X	-	-	X	(-)	(-)	X	-	-	-	-	-
STEP 7 Professional	2006 SR6	6ES7 810-5CC10-0YA5	-	-	X	X	-	-	X	X	X	-	-	-	-	-	-
STEP 7 Professional	2006 SR5	6ES7 810-5CC10-0YA5	-	-	X	-	-	-	X	X	X	-	-	-	-	-	-
STEP 7 Professional	2006 SR4	6ES7 810-5CC10-0YA5	X	-	X	-	-	-	X	X	-	-	-	-	-	-	-
STEP 7 Professional	2006 SR3	6ES7 810-5CC10-0YA5	X	-	X	-	-	-	X	X	-	-	-	-	-	-	-
STEP 7 Professional	2006 SR2	6ES7 810-5CC10-0YA5	X	X	X	-	X	X	-	-	-	-	-	-	-	-	-

**Note:** SIMATIC M7 is released only for operation with Windows 2000 SP4 or Windows XP SP1/2

<sup>1)</sup> only for Windows Server 2003 R2 SP2

A&D Data Management (ADDM)			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
A&D Data Management (Client)	V6.1	6BQ3 030-1AA30-3AC0	X	X	(-)	X	(-)	-	-	(-)	(-)	-	-	-	-	-	-
A&D Data Management (Client)	V5.2	6BQ3 030-1AA30-3AB0	X	X	-	X	(-)	-	-	-	-	-	-	-	-	-	-
A&D Data Management (Agent)	V1.2	6BQ3 030-4AA00-0AC0	X	X	(-)	-	-	-	-	(-)	-	-	-	-	-	-	-

Automation License Manager			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Automation License Manager	V 5.3	---	-	(-)	X	X	X	(-)	(-)	X	X	X	X	X	X	X	X
Automation License Manager	V5.2	----	-	X	X	X	X	-	-	X	X	X	X	X	X	X	X
Automation License Manager	V5.1	----	-	X	X	X	X	-	-	X	X	X	X	X	X	X	X
Automation License Manager	V5.0	----	X	X	X	X	X	X	X	X	X	X	(-)	-	-	-	-
Automation License Manager	V4.0	----	X	X	X	X	X	X	X	(-)	(-)	(-)	(-)	-	-	-	-
Automation License Manager	V3.0	----	X	X	(-)	X	X	X	(-)	(-)	(-)	(-)	(-)	-	-	-	-
Automation License Manager	V2.2	----	X	X	(-)	X	(-)	(-)	(-)	(-)	(-)	(-)	(-)	-	-	-	-

**Note:** The current Automation License Manager is part of the STEP 7 system setup

CFC			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
CFC	V8.0	6ES7 658-1EX08-2YA5	-	-	X <sup>4)</sup>	-	X <sup>4)</sup>	-	X <sup>4)</sup>	X	X	X	X	X	X	X	X
CFC	V7.1	6ES7 658-1EX17-2YA5	X	-	X	-	X	-	X <sup>3)</sup>	X	X	X <sup>3)</sup>	(-)	-	-	-	-
CFC	V7.0	6ES7 658-1EX07-2YA5	X	X	X <sup>2)</sup>	X	X <sup>2)</sup>	-	-	X <sup>2)</sup>	X <sup>2)</sup>	-	-	-	-	-	-
CFC	V6.1	6ES7 658-1EX16-2YA5	X	X <sup>1)</sup>	(-)	X <sup>1)</sup>	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of CFC V6.1+SP1 or higher

<sup>2)</sup> only as of CFC V7.0+SP1 or higher

<sup>3)</sup> only as of CFC V7.1+SP2 or higher

<sup>4)</sup> only as of STEP 7 V5.4+SP5 or higher

D7-SYS for SIMATIC TDC, FM 458, T400, SIMADYN D			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
D7-SYS	V8.0 <sup>6)</sup>	6ES7 852-0CC02-0YA5	-	-	-	-	-	-	-	X	X	X	X	X	X	X	X
D7-SYS	V7.1 <sup>5)</sup>	6ES7 852-0CC02-0YA5	(-)	X	X	(-)	X	-	-	X	X	-	-	-	-	-	-
D7-SYS	V7.0 <sup>4)</sup>	6ES7 852-0CC01-0YA5	X	X	(-)	X	-	-	-	-	-	-	-	-	-	-	-
D7-SYS	V6.2 <sup>2)</sup>	6ES7 852-0CC00-0YA5	X	X <sup>3)</sup>	(-)	X <sup>3)</sup>	-	-	-	-	-	-	-	-	-	-	-
D7-SYS-SFC <sup>1)</sup>	V6.2 <sup>2)</sup>	6ES7 852-1CC00-0YA5	X	X <sup>3)</sup>	(-)	X <sup>3)</sup>	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> contains SFC V6.1

<sup>2)</sup> minimum requirements: STEP 7 V5.3 + SP1 and CFC V6.1

<sup>3)</sup> only as of D7-SYS V6.2+SP1 or higher and CFC V6.1+SP1 or higher

<sup>4)</sup> contains CFC V7.0 + SP1, SFC V7.0 + SP1 minimum requirements: STEP 7 V5.4 + SP3 or higher

<sup>5)</sup> contains CFC V7.1, SFC V7.1; minimum requirements: STEP 7 V5.4 + SP4 or higher

<sup>6)</sup> contains CFC V8.0, SFC V8.0; minimum requirements: STEP 7 V5.5 + SP2 or higher

DOCPRO			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
DOCPRO	V5.4	6ES7 803-0CC03-0YA5	X	X	(-)	(-)	X	X	(-)	X	X	X <sup>1)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>
DOCPRO	V5.1+SP2	6ES7 803-0CC02-0YE0	X	X	(-)	X	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of DOCPRO V5.4+SP1 or higher

<sup>2)</sup> only as of DOCPRO V5.4+SP2 or higher

Drive ES			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Drive ES Basic	V5.5	6SW1 700-5JA00-5AA0	X	X	X	X	X	-	X	X	X	X	-	-	-	-	-
Drive ES Basic	V5.4	6SW1 700-5JA00-3AA0	X	X	X <sup>1)</sup>	X	X	-	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	-	-	-	-	-	-
Drive ES Graphic	V6.0+HF1	6SW1 700-6JB00-0AA0	X	X	X	X	X	-	-	(-)	(-)	-	-	-	-	-	-

**Note:** Drive ES Basic with the component STARTER cannot be installed alongside SIMOTION SCOUT or S7-Technology on one PC/programming device.

Further information on Drive ES compatibility can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/18495518>

<sup>1)</sup> only as of Drive ES Basic V5.4+SP3 or higher

<sup>2)</sup> only as of Drive ES Basic V5.4+SP4 or higher

<sup>3)</sup> only as of Drive ES Basic V5.4+SP5 or higher

Modular PID CONTROL			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Modular PID Control (Tool)	V5.1.3	6ES7 830-1AA11-0YX0	X	X	X	X	X	X	X	X	X	X	X	X	X	(-)	(-)
Modular PID Control (Tool)	V5.1.2 V5.1.1	6ES7 830-1AA11-0YX0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
Modular PID Control (Tool)	V5.1	6ES7 830-1AA11-0YX0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	(-)	-	-	-	-	-
Modular PID Control (Tool)	V5.0	6ES7 830-1AA10-0YX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
Modular PID Control (FBs for S7)	V5.1	6ES7 860-1AA10-0YX0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
Modular PID Control (FBs for S7)	V5.0	6ES7 860-1AA10-0YX0	X	X	(-)	-	-	-	-	(-)	-	-	-	-	-	-	-

PC-Adapter USB			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
PC-Adapter USB	only HW <sup>1)</sup>	6ES7 972-0CB20-0XA0								X	X	X	X	X	X	X	X
PC-Adapter USB	V2.0	6ES7 972-0CB20-0XA0	X	X	(-)	X	X	X	(-)	-	-	-	-	-	-	-	-
PC-Adapter USB	V1.2	6ES7 972-0CB20-0XA0	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-
PC-Adapter USB	V1.1	6ES7 972-0CB20-0XA0	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> The functionality of PC-Adapter USB is integrated in STEP 7 V5.5. For this reason, drivers no longer have to be installed in order to operate the PC-Adapter USB.

<b>PID Self-Tuner</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
<b>Product Name</b>	<b>Version</b>	<b>Order Number</b>	<b>Win 2000 SP4</b>	<b>Win XP SP2</b>	<b>Win XP SP3</b>	<b>Win 2003 SP1</b>	<b>Win 2003 SP2</b>	<b>Vista</b>	<b>Vista SP1</b>	<b>Win XP SP3</b>	<b>Win 2003 SP2</b>	<b>Win 7</b>	<b>Win 7 SP1</b>	<b>Win 7 (64)</b>	<b>Win 7 SP1 (64)</b>	<b>Win 2008 R2 (64)</b>	<b>Win 2008 R2 SP1 (64)</b>
PID Self-Tuner (FBs)	V5.1.2	6ES7 860-4AA01-0YX0	X	X	X	X	X	X	X	X	X	X	X	X	X	(-)	(-)
PID Self-Tuner (FBs)	V5.1	6ES7 860-4AA01-0YX0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
PID Self-Tuner (FBs)	V5.0.1	6ES7 860-4AA01-0YX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<b>ProTool /Pro</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
<b>Product Name</b>	<b>Version</b>	<b>Order Number</b>	<b>Win 2000 SP4</b>	<b>Win XP SP2</b>	<b>Win XP SP3</b>	<b>Win 2003 SP1</b>	<b>Win 2003 SP2</b>	<b>Vista</b>	<b>Vista SP1</b>	<b>Win XP SP3</b>	<b>Win 2003 SP2</b>	<b>Win 7</b>	<b>Win 7 SP1</b>	<b>Win 7 (64)</b>	<b>Win 7 SP1 (64)</b>	<b>Win 2008 R2 (64)</b>	<b>Win 2008 R2 SP1 (64)</b>
ProTool /Pro CS	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	(-)	-	-	-	-	X <sup>1)</sup>	-	-	-	-	-	-	-
ProTool /Pro RT	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	(-)	-	-	-	-	X <sup>1)</sup>	-	-	-	-	-	-	-
ProAgent CS	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	(-)	-	-	-	-	X <sup>1)</sup>	-	-	-	-	-	-	-
ProAgent RT/ MP/ OP	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	(-)	-	-	-	-	X <sup>1)</sup>	-	-	-	-	-	-	-

<sup>1)</sup> only with Windows XP SP1/SP2

<b>Prodave MPI</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Prodave MPI/IE	V6.2	6ES7 807-4BA03-0YA0	-	X	X	-	-	-	-	X	X	X	X	X	X	X	X
Prodave MPI/IE	V6.1	6ES7 807-4BA02-0YA0	-	X	X	-	-	X	X	X	-	(-)	-	-	-	-	-
Prodave MPI/IE	V6.0	6ES7 807-4BA01-0YA0	X	X	(-)	-	-	-	-	X	-	-	-	-	-	-	-
Prodave MPI	V5.6	6ES7 807-4BA00-0YA0	X	(-)	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<b>RF-Manager</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
RF-Manager	2008 (V1.1)	6GT2 080-3C*00-8AA5	-	X	(-)	-	-	-	-	X	-	-	-	-	-	-	-
RF-Manager	2007 (V1.0)	6GT2 080-3C*00-7AA5	-	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<b>S7-200 PC Access</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
S7-200 PC Access	V1.0	6ES7 840-2CC01-0YX0	X	X <sup>1)</sup>	(-)	-	-	X <sup>2)</sup>	(-)	X	-	X <sup>3)</sup>	(-) <sup>3)</sup>	X <sup>3)</sup>	(-) <sup>3)</sup>	-	-

Further information on compatibility with S7-200 PC Access can be found on the Internet at: <http://support.automation.siemens.com/WWW/view/en/8675614>

<sup>1)</sup> only as of S7-200 PC Access V1.0 + SP1 or higher

<sup>2)</sup> only as of S7-200 PC Access V1.0 + SP3 or higher

<sup>3)</sup> only as of S7-200 PC Access V1.0 + SP6 or higher



S7-Distributed Safety			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
S7-Distributed Safety	V5.4	6ES7 833-1FC02-0YA5	X	X	X <sup>2)</sup>	X	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>
S7-Distributed Safety	V5.3	6ES7 833-1FC01-0YA5	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of S7-Distributed Safety V5.4+SP4 or higher

<sup>2)</sup> only as of S7-Distributed Safety V5.4+SP5 or higher

<sup>3)</sup> only as of S7-Distributed Safety V5.4+SP5 and S7-F Configuration Pack V5.5+SP7 or higher

<sup>4)</sup> only as of S7-Distributed Safety V5.4+SP5+ Upd1 or higher and S7-F Configuration Pack V5.5+SP9 or higher

S7-F Systems			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
S7-F Systems	V6.1+SP2	6ES7 833-1CC02-0YA5	-	(-)	X	(-)	X	-	-	X	(-)	(-)	X	-	X	(-)	X
S7-F Systems	V6.1	6ES7 833-1CC02-0YA5	-	X	X	-	X	-	-	X	X	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>
S7-F Systems	V6.0	6ES7 833-1CC01-0YA5	X	X	X	X	X	-	-	X	-	-	-	-	-	-	-
S7-F Systems	V5.2+SP4	6ES7 833-1CC00-0YX0	X	X	X	X	-	-	-	-	-	-	-	-	-	-	-

**Note:** S7-F Systems requires CFC

<sup>1)</sup> Only for S7-F Systems V6.1+SP1

<b>S7-GRAPH</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
<b>Product Name</b>	<b>Version</b>	<b>Order Number</b>	<b>Win 2000 SP4</b>	<b>Win XP SP2</b>	<b>Win XP SP3</b>	<b>Win 2003 SP1</b>	<b>Win 2003 SP2</b>	<b>Vista</b>	<b>Vista SP1</b>	<b>Win XP SP3</b>	<b>Win 2003 SP2</b>	<b>Win 7</b>	<b>Win 7 SP1</b>	<b>Win 7 (64)</b>	<b>Win 7 SP1 (64)</b>	<b>Win 2008 R2 (64)</b>	<b>Win 2008 R2 SP1 (64)</b>
S7-GRAPH	V5.3	6ES7 811-0CC06-0YA5	X	X	X <sup>4)</sup>	X <sup>1)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>2)</sup>	X <sup>4)</sup>	X <sup>5)</sup>	X <sup>5)</sup>	X <sup>5)</sup>	X <sup>5)</sup>	X <sup>5)</sup>
S7-GRAPH	V5.2	6ES7 811-0CC05-0YX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of S7-GRAPH V5.3+SP1 or higher

<sup>2)</sup> only as of S7-GRAPH V5.3+SP4 or higher

<sup>3)</sup> only as of S7-GRAPH V5.3+SP4 or higher

<sup>4)</sup> only as of S7-GRAPH V5.3+SP6 or higher

<sup>5)</sup> only as of S7-GRAPH V5.3+SP7 or higher

<b>S7-HiGraph</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
<b>Product Name</b>	<b>Version</b>	<b>Order Number</b>	<b>Win 2000 SP4</b>	<b>Win XP SP2</b>	<b>Win XP SP3</b>	<b>Win 2003 SP1</b>	<b>Win 2003 SP2</b>	<b>Vista</b>	<b>Vista SP1</b>	<b>Win XP SP3</b>	<b>Win 2003 SP2</b>	<b>Win 7</b>	<b>Win 7 SP1</b>	<b>Win 7 (64)</b>	<b>Win 7 SP1 (64)</b>	<b>Win 2008 R2 (64)</b>	<b>Win 2008 R2 SP1 (64)</b>
S7-HiGraph	V5.3	6ES7 811-3CC05-0YA5	X	X	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	-	-	X <sup>1)</sup>	X <sup>1)</sup>	-	-	-	-	-	-
S7-HiGraph	V5.2	6ES7 811-3CC04-0YE0	X	(-)	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of S7-HiGraph V5.3+SP1 or higher

S7-PCT			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 R2 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
S7-PCT	V3.2	----	-	(-)	(-)	-	(-)	(-)	(-)	X	X	X	X	X	X	X	X
S7-PCT	V3.1	----	-	(-)	(-)	-	(-)	(-)	(-)	X	X	X	X	X	X	X	X
S7-PCT	V3.0	----	-	(-)	(-)	-	(-)	(-)	(-)	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>
S7-PCT	V2.3		-	(-)	(-)	-	(-)	(-)	(-)	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>
S7-PCT	V2.2		-	(-)	(-)	-	(-)	(-)	(-)	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>
S7-PCT	V2.1		-	(-)	(-)	-	(-)	(-)	(-)	X	X	X	-	-	-	-	-
S7-PCT	V2.0		-	X <sup>1)</sup>	X <sup>1)</sup>	-	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	(-)	(-)	(-)	-	-	-	-	-

**Note:** The respective current S7-PCT is a component of the general setup of STEP 7

- 1) only as of STEP 7 V5.4+SP5 or higher
- 2) only as of STEP 7 V5.5+SP1
- 3) only as of STEP 7 V5.5+SP2
- 4) only as of STEP 7 V5.5+SP3

S7-PDIAG			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
S7-PDIAG	V5.3	6ES7 840-0CC04-0YA5	X	X	X <sup>2)</sup>	X	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>
S7-PDIAG	V5.1	6ES7 840-0CC03-0YE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

- 1) only as of S7-PDIAG V5.3+SP2 or higher
- 2) only as of S7-PDIAG V5.3+SP3 or higher
- 3) only as of S7-PDIAG V5.3+SP5 or higher
- 4) only as of S7-PDIAG V5.3+SP6 or higher

<b>S7-PLCSIM</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
<b>Product Name</b>	<b>Version</b>	<b>Order Number</b>	<b>Win 2000 SP4</b>	<b>Win XP SP2</b>	<b>Win XP SP3</b>	<b>Win 2003 SP1</b>	<b>Win 2003 SP2</b>	<b>Vista</b>	<b>Vista SP1</b>	<b>Win XP SP3</b>	<b>Win 2003 SP2</b>	<b>Win 7</b>	<b>Win 7 SP1</b>	<b>Win 7 (64)</b>	<b>Win 7 SP1 (64)</b>	<b>Win 2008 R2 (64)</b>	<b>Win 2008 R2 SP1 (64)</b>
S7-PLCSIM <sup>1)</sup>	V5.4	6ES7 841-0CC05-0YA5	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>4)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>2)</sup>	X <sup>5)</sup>	X <sup>6)</sup>	X <sup>6)</sup>	X <sup>6)</sup>	X <sup>6)</sup>	X <sup>6)</sup>
S7-PLCSIM	V5.3	6ES7 841-0CC04-0YA5	X	X	(-)	X <sup>3)</sup>	(-)	-	-	X	X	-	-	-	-	-	-
S7-PLCSIM	V5.2	6ES7 841-0CC03-0YE0	X	(-)	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> S7-PLCSIM V5.4 or higher cannot be used with STEP 7 Lite, please use S7-PLCSIM V5.3+SP1

<sup>2)</sup> only as of STEP 7 V5.4+SP1 or higher

<sup>3)</sup> only as of S7-PLCSIM V5.3+SP1 or higher

<sup>4)</sup> only as of S7-PLCSIM V5.4+SP2 or higher

<sup>5)</sup> only as of S7-PLCSIM V5.4+SP4 or higher

<sup>6)</sup> only as of S7-PLCSIM V5.4+SP5 or higher

<b>S7-SCL</b>			<b>STEP 7 V5.4</b>							<b>STEP 7 V5.5</b>							
<b>Product Name</b>	<b>Version</b>	<b>Order Number</b>	<b>Win 2000 SP4</b>	<b>Win XP SP2</b>	<b>Win XP SP3</b>	<b>Win 2003 SP1</b>	<b>Win 2003 SP2</b>	<b>Vista</b>	<b>Vista SP1</b>	<b>Win XP SP3</b>	<b>Win 2003 SP2</b>	<b>Win 7</b>	<b>Win 7 SP1</b>	<b>Win 7 (64)</b>	<b>Win 7 SP1 (64)</b>	<b>Win 2008 R2 (64)</b>	<b>Win 2008 R2 SP1 (64)</b>
S7-SCL	V5.3	6ES7 811-1CC05-0YA5	X	X	X <sup>3)</sup>	X <sup>1)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>	X <sup>4)</sup>
S7-SCL	V5.1+SP4	6ES7 811-1CC04-0YX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of S7-SCL V5.3+SP2 or higher

<sup>2)</sup> only as of S7-SCL V5.3+SP3 or higher

<sup>3)</sup> only as of S7-SCL V5.3+SP5 or higher

<sup>4)</sup> only as of S7-SCL V5.3+SP6 or higher

S7-Technology			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
S7-Technology	V4.2+SP3	6ES7 864-1CC42-0YA5	-	-	-	-	-	-	-	X <sup>3)</sup>	-	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	-	-
S7-Technology	V4.2+SP2	6ES7 864-1CC42-0YA5	-	-	-	-	-	-	-	X <sup>3)</sup>	-	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	-	-
S7-Technology	V4.2+SP1	6ES7 864-1CC42-0YA5	-	-	-	-	-	-	-	X <sup>3)</sup>	-	X <sup>3)</sup>	X <sup>3)</sup>	-	-	-	-
S7-Technology	V4.2	6ES7 864-1CC42-0YA5	-	-	X <sup>2)</sup>	-	-	-	(-) <sup>2)</sup>	X	-	(-)	-	-	-	-	-
S7-Technology	V4.1	6ES7 864-1CC41-0YX0	-	X <sup>1)</sup>	(-)	-	-	-	-	X	-	-	-	-	-	-	-
S7-Technology	V3.0	6ES7 864-1CC30-0YX0	X	X	(-)	-	-	-	-	(-)	-	-	-	-	-	-	-
S7-Technology	V2.0	6ES7 864-1CC20-0YX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

**Note:** S7-Technology cannot be installed alongside SIMOTION SCOUT or Drive ES Basic with the component STARTER on one PC/programming device.

For the function "Drive Control Chart (DCC)", S7 technology contains certain versions of the CFC product and cannot be combined with other versions of CFC.

<sup>1)</sup> only as of STEP 7 V5.4+SP2 or higher

<sup>2)</sup> only as of STEP 7 V5.4+SP5 or higher

<sup>3)</sup> only as of STEP 7 V5.5+SP2 or higher

SIMATIC iMap			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SIMATIC iMap	V3.0+SP3 V3.0+SP2	6ES7 820-0CC04-0YA5	-	X	X	X	X	-	-	X	X	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>
SIMATIC iMap	V3.0	6ES7 820-0CC04-0YA5	X	X	X <sup>1)</sup>	X	X <sup>1)</sup>	X <sup>1)</sup>	(-)	X <sup>1)</sup>	X <sup>1)</sup>	-	-	-	-	-	-
SIMATIC iMap	V2.0+SP2	6ES7 820-0CC03-0YX0	X	X	(-)	X	-	-	-	-	-	-	-	-	-	-	-

**Note:** to run SIMATIC iMap, the SIMATIC iMap STEP 7-Add-on suitable for the STEP 7 Version must be installed. This ships on the STEP 7 DVD or can be obtained from the Internet.

<sup>1)</sup> only as of SIMATIC iMap V3.0+SP1 or higher

<sup>2)</sup> only as of SIMATIC iMap V3.0+SP3 or higher

SIMATIC Logon			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SIMATIC Logon	V1.5+SP2	6ES7 658-7BX51-0YA0	-	(-)	(-)	(-)	(-)	(-)	(-)	X	X	X	X	X	X	X	X
SIMATIC Logon	V1.5	6ES7 658-7BX41-2YA0	-	(-)	(-)	(-)	(-)	(-)	(-)	X	X	X	X	X	X	X	X
SIMATIC Logon	V1.4+SP4	6ES7 658-7BX41-2YA0	-	-	-	-	-	-	-	-	-	-	-	X	X	X	X
SIMATIC Logon	V1.4	6ES7 658-7BX41-2YA0	X	X	X <sup>1)</sup>	X	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	-	-	-	-

**Note:** With STEP 7 as of V5.4+SP3, you should use SIMATIC Logon V1.4+SP1 or higher.

<sup>1)</sup> only as of SIMATIC Logon V1.4+SP1 or higher

<sup>2)</sup> only as of SIMATIC Logon V1.4+SP3 or higher

<sup>3)</sup> only for Windows Server 2003 R2 SP2

SIMATIC Maintenance Station			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SIMATIC Maintenance Station	2009+SP3(V2.0.3)	6ES7 840-0WD01-0YA0	-	-	X	-	X <sup>3)4)</sup>	-	-	X <sup>5)</sup>	X <sup>3)5)</sup>	(-)	X <sup>5)</sup>	(-)	X <sup>5)</sup>	(-)	X <sup>5)</sup>
SIMATIC Maintenance Station	2009+SP2(V2.0.2)	6ES7 840-0WD01-0YA0	-	-	X	-	X <sup>3)</sup>	-	-	X	X <sup>3)</sup>	X	(-)	(-)	X	(-)	X
SIMATIC Maintenance Station	2009+SP1(V2.0.1)	6ES7 840-0WD01-0YA0	-	-	X	-	X <sup>3)</sup>	-	-	X	X <sup>3)</sup>	X	(-)	-	-	-	-
SIMATIC Maintenance Station	2009 (V2.0)	6ES7 840-0WD01-0YA0	-	X	X	-	X	-	X	X	X	-	-	-	-	-	-
SIMATIC Maintenance Station	2007 (V1.0)	6ES7 840-0WD00-0YA0	-	X <sup>1)</sup>	(-)	X <sup>1)</sup>	X <sup>2)</sup>	-	-	(-)	X <sup>2)</sup>	-	-	-	-	-	-

<sup>1)</sup> only as of STEP 7 V5.4+SP2 or higher

<sup>2)</sup> only as of SIMATIC Maintenance Station 2007+SP2 or higher

<sup>3)</sup> only for Windows Server 2003 R2 SP2

<sup>4)</sup> with STEP 7 V5.4+SP5

<sup>5)</sup> with STEP 7 V5.5+SP2 or SP3

SIMATIC NET			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
<b>SIMATIC NET PC Software</b>	<b>V8.1</b>		-	-	-	-	-	-	-	-	-	X	X	X	X	X	X
Comprising:																	
DP-5613	V8.1	6GK1 713-5DB08-1AA0															
S7-5613	V8.1	6GK1 713-5CB08-1AA0															
SOFTNET-DP	V8.1	6GK1 704-5DW08-1AA0															
SOFTNET-DP Slave	V8.1	6GK1 704-5SW08-1AA0															
SOFTNET-S7	V8.1	6GK1 704-5CW08-1AA0															
CP5613/CP5614 Software DP-Base	V8.1	Ships with CP															
S7-1613	V8.1	6GK1 716-1CB08-1AA0															
SOFTNET-S7	V8.1	6GK1 704-1CW08-1AA0															
SOFTNET-PG	V8.1	6GK1 704-1PW08-1AA0															
SOFTNET-S7 Lean	V8.1	6GK1 704-1LW08-1AA0															
S7-RedConnect Power Pack	V8.1	6GK1 716-0HB08-1AC0															
S7-RedConnect	V8.1	6GK1 716-0HB08-1AA0															
SNMP OPC Server Basic	V8.1	6GK1 706-1NW08-1AA0															
SNMP OPC Server Extended	V8.1	6GK1 706-1NX08-1AA0															
SNMP OPC Server Power Pack	V8.1	6GK1 706-1NW08-1AC0															
Softnet PROFINET IO	V8.1	6GK1 704-1HW08-1AA0															
NCM PC / S7	V5.5.1	----															



SIMATIC NET			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
<b>SIMATIC NET PC Software</b>	<b>V8.0</b>		-	-	-	-	-	-	-	-	-	X	-	-	-	-	-
Comprising:																	
DP-5613	V8.0	6GK1 713-5DB80-3AA0															
S7-5613	V8.0	6GK1 713-5CB80-3AA0															
SOFTNET-DP	V8.0	6GK1 704-5DW80-3AA0															
SOFTNET-DP Slave	V8.0	6GK1 704-5SW80-3AA0															
SOFTNET-S7	V8.0	6GK1 704-5CW80-3AA0															
CP5613/CP5614 Software DP-Base	V8.0	Ships with CP															
S7-1613	V8.0	6GK1 716-1CB80-3AA0															
SOFTNET-S7	V8.0	6GK1 704-1CW80-3AA0															
SOFTNET-PG	V8.0	6GK1 704-1PW80-3AA0															
SOFTNET-S7 Lean	V8.0	6GK1 704-1LW80-3AA0															
S7-RedConnect Power Pack	V8.0	6GK1 716-0HB80-3AC0															
S7-RedConnect	V8.0	6GK1 716-0HB80-3AA0															
SNMP OPC Server Basic	V8.0	6GK1 706-1NW80-3AA0															
SNMP OPC Server Extended	V8.0	6GK1 706-1NX80-3AA0															
SNMP OPC Server Power Pack	V8.0	6GK1 706-1NW80-3AC0															
Softnet PROFINET IO	V8.0	6GK1 704-1HW80-3AA0															
NCM PC / S7	V5.4.5	----															

SIMATIC NET			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
<b>SIMATIC NET PC Software</b>	<b>2008</b>		-	X	X	-	X	-	X	X	X	-	-	-	-	-	-
Comprising:	<b>(V7.1)</b>																
DP-5613	2008	6GK1 713-5DB71-3AA0															
S7-5613	2008	6GK1 713-5CB71-3AA0															
FMS-5613	2008	6GK1 713-5FB71-3AA0															
SOFTNET-DP	2008	6GK1 704-5DW71-3AA0															
SOFTNET-DP Slave	2008	6GK1 704-5SW71-3AA0															
SOFTNET-S7	2008	6GK1 704-5CW71-3AA0															
CP5613/CP5614 Software DP-Base	2008	Ships with CP															
S7-1613	2008	6GK1 716-1CB71-3AA0															
SOFTNET-S7	2008	6GK1 704-1CW71-3AA0															
SOFTNET-PG	2008	6GK1 704-1PW71-3AA0															
SOFTNET-S7 Lean	2008	6GK1 704-1LW71-3AA0															
S7-RedConnect Power Pack	2008	6GK1 716-0HB71-3AC0															
S7-RedConnect	2008	6GK1 716-0HB71-3AA0															
SNMP OPC Server Basic	2008	6GK1 706-1NW71-3AA0															
SNMP OPC Server Extended	2008	6GK1 706-1NX71-3AA0															
SNMP OPC Server Power Pack	2008	6GK1 706-1NW71-3AC0															
PROFINET CBA OPC Server	2008	6GK1 706-0HB71-3AA0															
Softnet PROFINET IO	2008	6GK1 704-1HW71-3AA0															
TF-1613	2008	6GK1 716-1TB71-3AA0															
NCM PC / S7	V5.4.4	----															

SIMATIC NET			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
<b>SIMATIC NET PC Software</b>	<b>2007</b>		-	X	-	X	X	X	-	(-)	(-)	-	-	-	-	-	
Comprising:	<b>(V7.0)</b>																
DP-5613	V7.0	6GK1 713-5DB70-3AA0															
S7-5613	V7.0	6GK1 713-5CB70-3AA0															
FMS-5613	V7.0	6GK1 713-5FB70-3AA0															
SOFTNET-DP	V7.0	6GK1 704-5DW70-3AA0															
SOFTNET-DP Slave	V7.0	6GK1 704-5SW70-3AA0															
SOFTNET-S7	V7.0	6GK1 704-5CW70-3AA0															
CP5613/CP5614 Software DP-Base	V7.0	Ships with CP															
S7-1613	V7.0	6GK1 716-1CB70-3AA0															
SOFTNET-S7	V7.0	6GK1 704-1CW70-3AA0															
SOFTNET-PG	V7.0	6GK1 704-1PW70-3AA0															
SOFTNET-S7 Lean	V7.0	6GK1 704-1LW70-3AA0															
S7-RedConnect Power Pack	V7.0	6GK1 716-0HB70-3AC0															
S7-RedConnect	V7.0	6GK1 716-0HB70-3AA0															
SNMP OPC Server Basic	V7.0	6GK1 706-1NW70-3AA0															
SNMP OPC Server Extended	V7.0	6GK1 706-1NX70-3AA0															
SNMP OPC Server Power Pack	V7.0	6GK1 706-1NW70-3AC0															
DX OPC Server	V7.0	6GK1 706-0XW70-3AA0															
PN OPC Server	V7.0	6GK1 706-0HB70-3AA0															
Softnet PROFINET IO	V7.0	6GK1 704-1HW70-3AA0															
TF-1613	V7.0	6GK1 716-1TB70-3AA0															
NCM PC / S7	V5.4.3	----															

SIMATIC NET			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
<b>SIMATIC NET PC Software</b>	<b>2006</b>		X	X	-	X	-	-	-	-	-	-	-	-	-	-	-
Comprising:	<b>(V6.4)</b>																
DP-5613	V6.4	6GK1 713-5DB64-3AA0															
S7-5613	V6.4	6GK1 713-5CB64-3AA0															
FMS-5613	V6.4	6GK1 713-5FB64-3AA0															
SOFTNET-DP	V6.4	6GK1 704-5DW64-3AA0															
SOFTNET-DP Slave	V6.4	6GK1 704-5SW64-3AA0															
SOFTNET-S7	V6.4	6GK1 704-5CW64-3AA0															
CP5613/CP5614 Software DP-Base	V6.4	Ships with CP															
S7-1613	V6.4	6GK1 716-1CB64-3AA0															
SOFTNET-S7	V6.4	6GK1 704-1CW64-3AA0															
SOFTNET-PG	V6.4	6GK1 704-1PW64-3AA0															
SOFTNET-S7 Lean	V6.4	6GK1 704-1LW64-3AA0															
S7-RedConnect upgrade	V6.4	6GK1 716-0HB64-3AA4															
S7-RedConnect	V6.4	6GK1 716-0HB64-3AA0															
SNMP OPC Server Basic	V6.4	6GK1 706-1NW64-3AA0															
SNMP OPC Server Extended	V6.4	6GK1 706-1NX64-3AA0															
SNMP OPC Server Power Pack	V6.4	6GK1 706-1NW64-3AA4															
DX OPC Server	V6.4	6GK1 706-0XW64-3AA0															
PN OPC Server	V6.4	6GK1 706-0HB64-3AA0															
Softnet PROFINET IO	V6.4	6GK1 704-1HW64-3AA0															
TF-1613	V6.4	6GK1 716-1TB64-3AA0															
NCM PC / S7	V5.4.1	----															

**Note:** Further information on compatibility with SIMATIC NET can be found on the Internet at: <http://support.automation.siemens.com/WWW/view/en/9859007>

SIMATIC PDM			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SIMATIC PDM	V8.2 <sup>3)</sup>	6ES7658-3AB28-0YA5	-	-	-	-	-	-	-	-	-	-	X	-	X	-	X
SIMATIC PDM	V8.1.1	6ES7658-3AB18-0YA5	-	-	-	-	-	-	-	X	X <sup>2)</sup>	-	X	-	X	-	X
SIMATIC PDM	V8.1	6ES7658-3AB18-0YA5	-	-	-	-	-	-	-	X	X <sup>2)</sup>	-	X	-	X	-	X
SIMATIC PDM	V8.0.2	6ES7 658-3MD08-0YA5	-	-	-	-	-	-	-	X	X <sup>2)</sup>	-	X	-	X	-	X
SIMATIC PDM	V8.0.1	6ES7 658-3MD08-0YA5	-	-	-	-	-	-	-	X	X <sup>2)</sup>	-	X	-	X	-	X
SIMATIC PDM	V8.0	6ES7 658-3LD08-0YA5	-	-	-	-	-	-	-	X	X <sup>2)</sup>	-	X	-	X	-	X
SIMATIC PDM	V6.1	6ES7 658-3AX16-0YA5	-	-	X	-	X <sup>2)</sup>	-	-	X	X <sup>2)</sup>	-	-	-	-	-	-
SIMATIC PDM	V6.0	6ES7 658-3AX06-0YA5	X	X	X <sup>1)</sup>	-	-	-	-	X <sup>1)</sup>	-	-	-	-	-	-	-

<sup>1)</sup> only as of SIMATIC PDM V6.0+SP5

<sup>2)</sup> only Windows Server 2003 R2 SP2

<sup>3)</sup> only as of STEP 7 V5.5+SP4

SIMATIC Safety Matrix			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SIMATIC Safety Matrix	V6.2 + SP2	6ES7 833-1SM*2-0YA5	-	(-)	X	(-)	X	-	-	X	(-)	(-)	X	-	X	(-)	X
SIMATIC Safety Matrix	V6.2	6ES7 833-1SM*2-0YA5	-	X	X	X	X	-	-	X	X	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>
SIMATIC Safety Matrix	V6.1	6ES7 833-1SM*1-0YA5	X	X	X	X	X	-	-	X	X	-	-	-	-	-	-
SIMATIC Safety Matrix	V5.2	6ES7 833-1SM00-0YA5	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

**Note:** SIMATIC Safety Matrix requires S7-F Systems and CFC

<sup>1)</sup> only as of SIMATIC Safety Matrix V6.2+SP1

SIMOTION SCOUT			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SIMOTION Scout	V4.3 SP1 HF12	6AU1810-1BA43-1XA0	-	-	-	-	-	-	-	X <sup>6)</sup>	-	X <sup>6)</sup>	-	-	-	-	-
SIMOTION Scout	V4.3 SP1	6AU1 810-*BA43-1XA0	-	-	-	-	-	-	-	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	-	-	-
SIMOTION Scout	V4.2 SP1	6AU1 810-*BA42-1XA0	-	-	-	-	-	-	-	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	-	-	-
SIMOTION Scout	V4.1 SP4	6AU1 810-*BA41-4XA0	-	-	X <sup>3)</sup>	-	-	-	X <sup>4)</sup>	-	-	-	-	-	-	-	-
SIMOTION Scout	V4.1 SP2	6AU1 810-*BA41-2XA0	-	X <sup>2)</sup>	X <sup>3)</sup>	-	-	-	-	-	-	-	-	-	-	-	-
SIMOTION Scout	V4.1 SP1	6AU1 810-*BA41-1XA0	-	X <sup>1)</sup>	(-)	-	-	-	-	-	-	-	-	-	-	-	-
SIMOTION Scout	V4.0	6AU1 810-0BA40-0XE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

**Note:** SIMOTION SCOUT cannot be installed alongside S7-Technology or Drive ES Basic with the component STARTER on one PC/programming device.

Further information on SIMOTION Scout compatibility can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/18857317>

<sup>1)</sup> only as of STEP 7 V5.4+SP1

<sup>2)</sup> only as of STEP 7 V5.4+SP2

<sup>3)</sup> only as of STEP 7 V5.4+SP4

<sup>4)</sup> only as of STEP 7 V5.4+SP4; only with Windows Vista 32bit + SP1 Business

<sup>5)</sup> only as of STEP 7 V5.5+SP1

<sup>6)</sup> only as of STEP 7 V5.5+SP2+HF1

SINAUT ST7			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SINAUT ST7	V5.2	6NH7 997-0CA52-0AA0	-	-	-	-	-	-	-	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>
SINAUT ST7	V5.1	6NH7 997-0CA51-0AA0	-	X <sup>1)</sup>	X <sup>1)</sup>	-	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	X	X	(-)	-	-	-	-	-
SINAUT ST7	V5.0	6NH7 997-0CA50-0AA0	-	X	X	-	X	X	X	X	X	(-)	-	-	-	-	-
SINAUT ST7	V4.1	6NH7 997-0CA15-0AA0	X	X	(-)	X	-	-	-	(-)	-	-	-	-	-	-	-
SINAUT ST7	V4.0	6NH7 997-0CA15-0AA0	X	X	(-)	X	-	-	-	(-)	-	-	-	-	-	-	-
SINAUT ST7	V3.6	6NH7 997-0CA15-0AA0	X	X	(-)	X	-	-	-	(-)	-	-	-	-	-	-	-

<sup>1)</sup> only as of STEP 7 V5.4+SP4

<sup>2)</sup> only as of STEP 7 V5.5+SP1

SINEMA			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
SINEMA E Lean / Standard	2006 (V1.0)	6GK1 781-0AA00-6AA0 6GK1 782-0AA00-6AA0	-	X	X <sup>2)</sup>	-	-	X <sup>1)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	-	-	-	-	-	-	-

<sup>1)</sup> only as of SINEMA E Lean / Standard 2006+SP2 (V1.0+SP2) or higher

<sup>2)</sup> only as of SINEMA E Lean / Standard 2006+SP3 (V1.0+SP3) or higher

<sup>3)</sup> only as of SINEMA E Lean / Standard 2006+SP4 (V1.0+SP4) or higher

SIRIUS Engineering			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Modular Safety System ES	2008+SP3	3ZS1 314-5CC10-0YA5	-	X	X	-	-	-	-	X	-	X	X	X	X	-	-
Motor Starter ES	2007+SP5	3ZS1 310-*CC10-0YA5	X	X	X	-	-	-	-	X	-	X	X	X	X	-	-
Soft Starter ES	2007+SP5	3ZS1 313-*CC10-0YA5	-	X	X	-	X	-	-	X	X	-	X	X	X	X	X
Switch ES Motor Starter	2004+SP1	3ZS1 310-0CC20-0YA0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
SIMOCODE ES	2007+SP5	3ZS1 312-*CC10-0YA5	-	X	X	-	X	-	-	X	X	-	X	X	X	X	X
SIMOCODE-ES Professional	2004+SP1	3ZS1 312-2CC10-0YA0	X	X	(-)	-	-	-	(-)	(-)	-	-	-	-	-	-	-
WIN-SIMOCODE-DP Professional	V1.3+SP2	3UF5 710-0AA00-0	-	X	X	-	-	-	-	X	-	X	X	X	X	-	-
OM-SIMOCODE-DP	V1.1	3UF5 712-0AA00-0	X	X	X <sup>1)</sup>	-	-	X <sup>1)</sup>	(-)	X <sup>1)</sup>	-	-	-	-	-	-	-
Objekt Manager DP/ASi F-Link	V1.0	6RK3 141-*CD10	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>2)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	X <sup>3)</sup>	-	-	-	-	-	-

<sup>1)</sup> only as of OM-SIMOCODE-DP V1.1+SP1+HF2

<sup>2)</sup> minimum requirements: STEP 7 V5.4+SP1 or higher and S7-Distributed Safety V5.4+SP1 or higher

<sup>3)</sup> only as of Objekt Manager DP/ASi F-Link V1.0+SP2; minimum requirements: STEP 7 V5.4+SP4 or higher and S7-Distributed Safety V5.4+SP3 or higher



Standard PID Control			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Standard PID Control (Tool)	V5.2.3	6ES7 830-2AA22-0YX0	X	X	X	X	X	X	X	X	X	X	X	X	X	(-)	(-)
Standard PID Control (Tool)	V5.2.2 V5.2.1	6ES7 830-2AA22-0YX0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
Standard PID Control (Tool)	V5.2	6ES7 830-2AA22-0YX0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	(-)	-	-	-	-	-
Standard PID Control (Tool)	V5.1	6ES7 830-2AA21-0YX0	X	X	(-)	-	-	-	-	(-)	-	-	-	-	-	-	-
Standard PID Control (FBs)	V5.2	6ES7 860-2AA21-0YX0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
Standard PID Control (FBs)	V5.1	6ES7 860-2AA21-0YX0	X	X	(-)	-	-	-	-	(-)	-	-	-	-	-	-	-

STARTER (drive commissioning tool)			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
STARTER	V4.3 SP1	6SL3 072-0AA00-0AG0	X	X	X	-	X	-	X	X	X	X	(-)	-	-	-	-
STARTER	V4.2	6SL3 072-0AA00-0AG0	X	X	X	-	X	-	X	X	X	X	(-)	-	-	-	-
STARTER	V4.1	6SL3 072-0AA00-0AG0	X	X	X <sup>1)</sup>	X	(-)	-	X <sup>2)</sup>	X <sup>1)</sup>	(-)	-	-	-	-	-	-
STARTER	V4.0	6SL3 072-0AA00-0AG0	X	X	(-)	X	(-)	-	-	(-)	(-)	-	-	-	-	-	-

**Note:** STARTER cannot be installed simultaneously with SIMOTION SCOUT or S7 Technology on the same PC/PG.

<sup>1)</sup> only as of STARTER V4.1+SP2 or higher

<sup>2)</sup> only as of STARTER V4.1+SP3 or higher

STEP 7 Lite			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
STEP 7 Lite	V3.0	6ES7 810-3CC07-0YA5	X	X	X <sup>1)</sup>	-	-	-	-	X <sup>1)</sup>	-	-	-	-	-	-	-
STEP 7 Lite	V2.0	6ES7 810-3CC06-0YE0	X	(-)	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> only as of STEP 7 Lite V3.0+SP3 or higher

STEP 7-Micro/WIN			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
STEP 7-Micro/WIN	V4.0	6ES7 810-2CC03-0YX0	X	X	X <sup>1)</sup>	-	-	X <sup>1)</sup>	X <sup>1)</sup>	X <sup>1)</sup>	-	X <sup>2)</sup>	(-) <sup>2)</sup>	X <sup>2)</sup>	(-) <sup>2)</sup>	-	-
STEP 7-Micro/WIN	V3.2	6ES7 810-2BC02-0YX0	X	(-)	(-)	-	-	-	-	-	-	-	-	-	-	-	-

**Note:** Further information on compatibility with STEP 7-Micro/Win can be found on the Internet at: <http://support.automation.siemens.com/WW/view/de/22621697>

<sup>1)</sup> only as of STEP 7-Micro/WIN V4.0+SP7 or higher

<sup>2)</sup> only as of STEP 7-Micro/WIN V4.0+SP9 or higher

Technological Functions			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Easy Motion Control	V2.1.1	6ES7 864-0AC01-0YX0	X	X	X	(-)	X	X	X	X	X	X	(-)	-	-	-	-
Easy Motion Control	V2.1	6ES7 864-0AC01-0YX0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	(-)	-	-	-	-	-
Easy Motion Control	V2.0	6ES7 864-0AC01-0YX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 350-1, 450-1 IF-CT1 Counter	V6.0.2	HW: 6ES7 350-1AH0*-0AE0 HW: 6ES7 450-1AP00-0AE0 HW: 6ES7 961-3AA00-0AC0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 350-1, 450-1 IF-CT1 Counter	V6.0.1	HW: 6ES7 350-1AH0*-0AE0 HW: 6ES7 450-1AP00-0AE0 HW: 6ES7 961-3AA00-0AC0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
FM 350-1, 450-1 IF-CT1 Counter	V6.0	HW: 6ES7 350-1AH0*-0AE0 HW: 6ES7 450-1AP00-0AE0 HW: 6ES7 961-3AA00-0AC0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-
FM 350-1, 450-1 IF-CT1 Counter	V5.1	HW: 6ES7 350-1AH0*-0AE0 HW: 6ES7 450-1AP00-0AE0 HW: 6ES7 961-3AA00-0AC0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 350-2 Counter	V6.0.2	HW: 6ES7 350-2AH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 350-2 Counter	V6.0.1	HW: 6ES7 350-2AH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
FM 350-2 Counter	V6.0	HW: 6ES7 350-2AH00-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-
FM 350-2 Counter	V4.0.3	HW: 6ES7 350-2AH00-0AE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 351, 451 Positioning	V6.0.2	HW: 6ES7 351-1AH0*-0AE0 HW: 6ES7 451-3AL00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 351, 451 Positioning	V6.0.1	HW: 6ES7 351-1AH0*-0AE0 HW: 6ES7 451-3AL00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-

Technological Functions			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
FM 351, 451 Positioning	V6.0	HW: 6ES7 351-1AH0*-0AE0 HW: 6ES7 451-3AL00-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-
FM 351, 451 Positioning	V5.0.1	HW: 6ES7 351-1AH0*-0AE0 HW: 6ES7 451-3AL00-0AE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 352, 452 Cam	V6.0.3	HW: 6ES7 352-1AH0*-0AE0 HW: 6ES7 452-1AH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 352, 452 Cam	V6.0.2	HW: 6ES7 352-1AH0*-0AE0 HW: 6ES7 452-1AH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
FM 352, 452 Cam	V6.0.1 V6.0	HW: 6ES7 352-1AH0*-0AE0 HW: 6ES7 452-1AH00-0AE0	X	X	(-)	(-)	X	X	X	X	X	-	-	-	-	-	-
FM 352, 452 Cam	V5.0.1	HW: 6ES7 352-1AH01-0AE0 HW: 6ES7 452-1AH00-0AE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 352-5 Programming Environment	V1.2.3	HW: 6ES7 352-5AH1*-0AE0 HW: 6ES7 352-5AH0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 352-5 Programming Environment	V1.2.2	HW: 6ES7 352-5AH1*-0AE0 HW: 6ES7 352-5AH0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
FM 352-5 Programming Environment	V1.2.1	HW: 6ES7 352-5AH1*-0AE0 HW: 6ES7 352-5AH0*-0AE0	X	X	(-)	(-)	X	X	X	X	X	-	-	-	-	-	-
FM 352-5 Programming Environment	V1.2	HW: 6ES7 352-5AH1*-0AE0 HW: 6ES7 352-5AH0*-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-
FM 352-5 Programming Environment	V1.1	HW: 6ES7 352-5AH1*-0AE0 HW: 6ES7 352-5AH0*-0AE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

Technological Functions			STEP 7 V5.4								STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)	
FM 353 Step	V4.03.09	6ES7 353-1AH01-7AG0 HW: 6ES7 353-1AH01-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-	
FM 353 Step	V4.03.07	6ES7 353-1AH01-7AG0 HW: 6ES7 353-1AH01-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-	
FM 353 Step	V4.03.05	6ES7 353-1AH01-7AG0 HW: 6ES7 353-1AH01-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-	
FM 353 Step	V4.03	6ES7 353-1AH01-7AG0 HW: 6ES7 353-1AH01-0AE0	X	X	(-)	(-)	(-)	-	-	-	-	-	-	-	-	-	-	
FM 354 Servo	V4.03.09	6ES7 354-1AH01-7AG0 HW: 6ES7 354-1AH01-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-	
FM 354 Servo	V4.03.07	6ES7 354-1AH01-7AG0 HW: 6ES7 354-1AH01-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-	
FM 354 Servo	V4.03.05	6ES7 354-1AH01-7AG0 HW: 6ES7 354-1AH01-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-	
FM 354 Servo	V4.03	6ES7 354-1AH01-7AG0 HW: 6ES7 354-1AH01-0AE0	X	X	(-)	(-)	(-)	-	-	-	-	-	-	-	-	-	-	
FM 453 Step/Servo	V3.03.08	6ES7 453-3AH00-7AG0 HW: 6ES7 453-3AH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-	
FM 453 Step/Servo	V3.03.07	6ES7 453-3AH00-7AG0 HW: 6ES7 453-3AH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-	
FM 453 Step/Servo	V3.03.06	6ES7 453-3AH00-7AG0 HW: 6ES7 453-3AH00-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-	
FM 453 Step/Servo	V3.03	6ES7 453-3AH00-7AG0 HW: 6ES7 453-3AH00-0AE0	X	X	(-)	(-)	(-)	-	-	-	-	-	-	-	-	-	-	

Technological Functions			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
FM 355, 455 PID Control	V6.1.2	HW: 6ES7 355-*VH*0-0AE0 HW: 6ES7 455-*VS00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 355, 455 PID Control	V6.1.1	HW: 6ES7 355-*VH*0-0AE0 HW: 6ES7 455-*VS00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
FM 355, 455 PID Control	V6.1	HW: 6ES7 355-*VH*0-0AE0 HW: 6ES7 455-*VS00-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-
FM 355, 455 PID Control	V6.0	HW: 6ES7 355-*VH*0-0AE0 HW: 6ES7 455-*VS00-0AE0	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-
FM 355, 455 PID Control	V5.0.1	HW: 6ES7 355-*VH*0-0AE0 HW: 6ES7 455-*VS00-0AE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 355-2	V6.1.2	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	-	-
FM 355-2	V6.1.1	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
FM 355-2	V6.1	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	(-)	(-)	X	X	(-)	(-)	(-)	-	-	-	-	-	-
FM 355-2	V6.0	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-
FM 355-2	V5.1	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
FM 357-2	V5.3.6	for HW: 6ES7 357-4AH03-3AE0 (L) 6ES7 357-4BH03-3AE0 (LX) 6ES7 357-4CH03-3AE0 (H)	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-

Technological Functions			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
FM 357-2	V5.03	for HW: 6ES7 357-4AH03-3AE0 (L) 6ES7 357-4BH03-3AE0 (LX) 6ES7 357-4CH03-3AE0 (H)	X	X	(-)	-	-	-	-	(-)	(-)	-	-	-	-	-	-
PtP Param for CP 340, CP 341, CP 440 and CP 441-1/2	V5.1.13 V5.1.12	HW: 6ES7 340-1*H0*-0AE0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 440-1CS00-0YE0 HW: 6ES7 441-*AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	X	X
PtP Param for CP 340, CP 341, CP 440 and CP 441-1/2	V5.1.11	HW: 6ES7 340-1*H0*-0AE0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 440-1CS00-0YE0 HW: 6ES7 441-*AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
PtP Param for CP 340, CP 341, CP 440 and CP 441-1/2	V5.1.10 V5.1.9	HW: 6ES7 340-1*H0*-0AE0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 440-1CS00-0YE0 HW: 6ES7 441-*AA0*-0AE0	X	X	X	(-)	X	X	X	(-)	(-)	-	-	-	-	-	-
Modbus Master	V3.1.7	6ES7 870-1AA00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	X	X
Modbus Master	V3.1.6	6ES7 870-1AA00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
Modbus Master	V3.1.5 V3.1.4	6ES7 870-1AA00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	(-)	(-)	-	-	-	-	-	-

Technological Functions			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Modbus Slave	V3.1.8	6ES7 870-1AB00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	X	X
Modbus Slave	V3.1.7	6ES7 870-1AB00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
Modbus Slave	V3.1.6 V3.1.5	6ES7 870-1AB00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	(-)	(-)	-	-	-	-	-	-
Data Highway	V1.0.3	6ES7 870-1AE00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	X	X	X	X
Data Highway	V1.0.2	6ES7 870-1AE00-0YA0 HW: 6ES7 341-1*H0*-0AE0 HW: 6ES7 441-2AA0*-0AE0	X	X	X	(-)	X	X	X	X	X	X	X	-	-	-	-
CP 444	V1.2.2	6ES7 444-1MX00-7xG0 HW: 6ES7 444-1MX00-0XE0	X	X	(-)	(-)	X	X <sup>1)</sup>	(-) <sup>1)</sup>	-	-	-	-	-	-	-	-
CP 444	V1.2.1	6ES7 444-1MX00-7xG0 HW: 6ES7 444-1MX00-0XE0	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> but not with STEP 7 V5.4+SP4 or higher



Telecontrol			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Telecontrol Server Basic	V2.0+SP3	6NH9 910-0AA20-0A*0	-	-	-	-	-	-	-	-	-	X	X	X	X	X	X

TeleService			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
TeleService Edition 08/2011	V6.1.5	6ES7 842-0CE00-0YE0	-	X	X	-	X	-	-	X	X	X	X	X	X	X	X
TeleService Edition 04/2011	V6.1.4	6ES7 842-0CE00-0YE0	-	X	X	-	X	-	-	X	X	X	(-)	-	-	-	-
TeleService Edition 11/2010	V6.1.3	6ES7 842-0CE00-0YE0	-	X	X	-	X	-	-	X	X	X	(-)	-	-	-	-
TeleService Edition 07/2008	V6.1.2	6ES7 842-0CE00-0YE0	X	X	X	X	X	X	X	X	X	-	-	-	-	-	-
TeleService Edition 11/2007 <sup>1)</sup>	V6.1.1	6ES7 842-0CE00-0YE0	X	X	(-)	X	X	X	(-)	(-)	X	-	-	-	-	-	-
TeleService Edition 01/2007 <sup>1)</sup>	V6.1	6ES7 842-0CE00-0YE0	X	X	(-)	X	X	-	-	(-)	(-)	-	-	-	-	-	-
TeleService Edition 02/2005	V6.0.1	6ES7 842-0CC10-0YA5	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-
TeleService Edition 07/2004	V6.0	6ES7 842-0CC10-0YA5	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> Teleservice V6.1 and V6.1+SP1 cannot be used with STEP 7 V5.4+SP4 or higher, please use Teleservice V6.1+SP2 or higher

USB-Prommer			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
USB-Prommer	only HW <sup>1)</sup>	6ES7 792-0AA00-0XA0								X	X	X	X	X	X	X	X
USB-Prommer Edition 10/2007	V2.0	6ES7 792-0AA00-0XA0	X	X	(-)	X	X	X	(-)	-	-	-	-	-	-	-	-
USB-Prommer	V1.1	6ES7 792-0AA00-0XA0	X	X	(-)	X	(-)	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> The functionality of USB Prommer is integrated in STEP 7 V5.5. For this reason, drivers no longer have to be installed in order to operate the USB-Prommer.

Version Cross Manager / Version Cross Checker			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Version Cross Manager (VXM)	V7.1 SP3	6ES7 658-1CX17-2YA5	-	-	X	-	X	-	X	X	X	X	X	X	X	X	X
Version Cross Manager (VXM)	V7.1	6ES7 658-1CX17-2YA5	X	-	X	-	X	-	X <sup>5)</sup>	X	X	X <sup>4)</sup>	(-)	-	-	-	-
Version Cross Manager (VXM)	V7.0	6ES7 658-1CX07-2YA5	X	X	X <sup>3)</sup>	X	X <sup>3)</sup>	-	-	X <sup>3)</sup>	X <sup>3)</sup>	-	-	-	-	-	-
Version Cross Checker (VXC) <sup>2)</sup>	V6.1	6ES7 658-1CX16-2YB5	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-
Version Cross Checker (VXC) <sup>1)</sup>	V6.0	6ES7 658-1CX06-2YA0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

<sup>1)</sup> Minimum requirements: CFC V5.2+SP1 or higher

<sup>2)</sup> Minimum requirements: CFC V6.1 or higher

<sup>3)</sup> only as of Version Cross Manager V7.0+SP1 or higher

<sup>4)</sup> only as of Version Cross Manager V7.1+SP2 or higher

<sup>5)</sup> only for Windows Vista SP1 Ultimate

Version Trail			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
Version Trail <sup>1)</sup>	V8.0	6ES7 658-1FX08-2YA5	-	-	X	-	X	-	X	X	X	X	X	X	X	X	X
Version Trail <sup>1)</sup>	V7.1	6ES7 658-1FX17-2YA5	X	-	X	-	X	-	(-)	X	X	X <sup>2)</sup>	(-)	-	-	-	-

<sup>1)</sup> Minimum requirements: STEP 7 V5.4+SP1 or higher and SIMATIC Logon Service V1.3 SP1 or higher

<sup>2)</sup> only as of Version Trail V7.1+SP2 or higher

WinAC			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
WinAC MP <sup>1)</sup>	2008 (V4.1)	6ES7 671-*E*00-0YA0	-	X	X	-	-	-	-	X	-	-	-	-	-	-	-
WinAC ODK	V4.2	6ES7 806-1CC02-0BA0	-	X	X	-	-	-	-	X	-	-	-	-	-	-	-
WinAC RTX F	2010 SP1 (V4.6.1)	6ES7 671-1RC08-0YA0	-	-	-	-	-	-	-	X	-	X	X	-	-	-	-
WinAC RTX F	2010 (V4.6)	6ES7 671-1RC08-0YA0	-	-	-	-	-	-	-	X	-	X	X	-	-	-	-
WinAC RTX F	2009 (V4.5)	6ES7 671-1RC07-0YA0	-	X	X	-	-	-	-	X	-	-	-	-	-	-	-
WinAC RTX	2010 SP1 (V4.6.1)	6ES7 671-0RC08-0YA0	-	-	-	-	-	-	-	X	-	X	X	-	-	-	-
WinAC RTX	2010 (V4.6)	6ES7 671-0RC08-0YA0	-	-	-	-	-	-	-	X	-	X	X	-	-	-	-
WinAC RTX	2009 (V4.5)	6ES7 671-0RC07-0YA0	-	X	X	-	-	-	-	X	-	-	-	-	-	-	-
WinAC RTX	2008 (V4.4)	6ES7 671-0RC06-0YA0	-	X	X <sup>2)</sup>	-	-	-	-	X <sup>2)</sup>	-	-	-	-	-	-	-
WinAC Slot 412 / 416	V4.0	6ES7 673-2CC40-0YA0 6ES7 673-6CC40-0YA0	X	X	(-)	-	-	-	-	X	-	-	-	-	-	-	-

<sup>1)</sup> additionally STEP 7 V5.4+SP4 or higher and WinCC flexible 2008 or higher is also required

<sup>2)</sup> only as of WinAC RTX 2008+SP1 or higher

WinCC			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
WinCC	V7.2	6AV6 381-2B*07-2AX0	-	-	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>
WinCC	V7.0 SP3	6AV6 381-2B*07-0AX0	-	-	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>	X <sup>9)</sup>
WinCC	V7.0 SP2	6AV6 381-2B*07-0AX0	-	-	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	X <sup>8)</sup>	X <sup>8)</sup>	X <sup>8)</sup>	-	-	-	-	-
WinCC	V7.0 SP1	6AV6 381-2B*07-0AX0	-	X <sup>4)</sup>	X <sup>4)</sup>	-	X <sup>4)</sup>	-	X <sup>4)</sup>	X <sup>6)</sup>	X <sup>6)</sup>	-	-	-	-	-	-
WinCC	V7.0	6AV6 381-2B*07-0AX0	-	X <sup>3)</sup>	-	-	X <sup>3)</sup>	X <sup>3)</sup>	-	-	-	-	-	-	-	-	-
WinCC	V6.2 SP3	6AV6 381-1B*06-2AX0	X <sup>2)</sup>	X <sup>2)</sup>	X <sup>2)</sup>	-	X <sup>2)</sup>	-	-	X	X	-	-	-	-	-	-
WinCC	V6.2 SP2	6AV6 381-1B*06-2AX0	X <sup>2)</sup>	X <sup>2)</sup>	-	-	X <sup>2)</sup>	-	-	-	-	-	-	-	-	-	-
WinCC	V6.2	6AV6 381-1B*06-2AX0	X <sup>1)</sup>	X <sup>1)</sup>	-	X <sup>1)</sup>	-	-	-	-	-	-	-	-	-	-	-
WinCC	V6.0+SP4	6AV6 381-1B*06-0EX0	X	X	-	X	-	-	-	-	-	-	-	-	-	-	-
WinCC/ProAgent <sup>7)</sup>	V7.0+SP2	6AV6 371-1DG07-0EX0	-	-	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	X	X	X	-	-	-	-	-
WinCC/ProAgent	V7.0+SP1	6AV6 371-1DG07-0EX0	-	X	X	-	X	-	X	X	X	(-)	-	-	-	-	-
WinCC/ProAgent	V6.0+SP4	6AV6 371-1DG06-0EX0	X	X	(-)	X	-	-	-	-	-	-	-	-	-	-	-
WinCC/ProAgent	V6.0+SP3	6AV6 371-1DG06-0DX0	X	X	(-)	-	-	-	-	-	-	-	-	-	-	-	-

**Note:** There are close dependencies between STEP 7, WinCC and WinCC/ProAgent and between various service packs. The latest information on released combinations is available on the Internet at: <http://support.automation.siemens.com/WW/view/en/21928032>

For joint operation of STEP 7 V5.4 SP4 with WinCC 7.0 and V7.0 SP1 under Windows Vista you will need to install the SIMATIC NET CD 2007 available on the WinCC data carrier.

<sup>1)</sup> only as of STEP 7 V5.4+SP1, not tested with STEP 7 V5.4+SP4 or higher

<sup>2)</sup> only as of STEP 7 V5.4+SP1, STEP 7 V5.4+SP5 only with V6.2+SP2 HFS or higher

<sup>3)</sup> only as of STEP 7 V5.4+SP3, not tested with STEP 7 V5.4+SP4 or higher

<sup>4)</sup> only as of STEP 7 V5.4+SP4

<sup>5)</sup> only as of STEP 7 V5.4+SP5

<sup>6)</sup> not tested with STEP 7 V5.5+SP1 or higher

<sup>7)</sup> WinCC/ProAgent V7.0+SP2 only in conjunction with WinCC V7.0+SP2+Update 1 or higher

<sup>8)</sup> STEP 7 V5.4+SP1 only with WinCC V7.0+SP2 Upd4 or higher not tested with STEP 7 V5.5+SP2 or higher

<sup>9)</sup> only as of STEP 7 V5.5+SP2

<sup>10)</sup> only as of STEP 7 V5.4+SP1, not tested with STEP 7 V5.4+SP4

<sup>11)</sup> not tested with STEP 7 V5.4+SP4 or higher

WinCC flexible			STEP 7 V5.4							STEP 7 V5.5							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP2	Win XP SP3	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1	Win XP SP3	Win 2003 SP2	Win 7	Win 7 SP1	Win 7 (64)	Win 7 SP1 (64)	Win 2008 R2 (64)	Win 2008 R2 SP1 (64)
WinCC flexible (Micro/Compact/Standard/Advanced)	2008 SP3 (V1.4)	6AV6 61*-0AA01-3AA5	-	X <sup>6)</sup>	X <sup>6)</sup>	-	-	-	-	X	-	X <sup>7)</sup>	X <sup>7)</sup>	X <sup>7)</sup>	X <sup>7)</sup>	-	-
WinCC flexible Runtime	2008 SP3 (V1.4)	6AV6 613-1*A01-3AA0	-	X <sup>6)</sup>	X <sup>6)</sup>	-	-	-	-	X	-	X <sup>7)</sup>	X <sup>7)</sup>	X <sup>7)</sup>	X <sup>7)</sup>	-	-
WinCC flexible (Micro/Compact/Standard/Advanced)	2008	6AV6 61*-0AA01-3AA5	-	X <sup>3)</sup>	X <sup>3)</sup>	-	-	X <sup>8)</sup>	X <sup>4)</sup>	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	-	-	-
WinCC flexible Runtime	2008	6AV6 613-1*A01-3AA0	-	X <sup>3)</sup>	X <sup>3)</sup>	-	-	X <sup>8)</sup>	X <sup>4)</sup>	X <sup>5)</sup>	-	X <sup>5)</sup>	-	-	-	-	-
WinCC flexible (Micro/Compact/Standard/Advanced)	2007	6AV6 61*-0AA01-2AA5	X <sup>2)</sup>	X <sup>2)</sup>	(-)	-	-	-	-	-	-	-	-	-	-	-	-
WinCC flexible Runtime	2007	6AV6 613-1*A01-2AA0	X <sup>2)</sup>	X <sup>2)</sup>	(-)	-	-	-	-	-	-	-	-	-	-	-	-
WinCC flexible (Micro/Compact/Standard/Advanced)	2005	6AV6 61*-0AA01-1CA5	X <sup>1)</sup>	X <sup>1)</sup>	(-)	-	-	-	-	-	-	-	-	-	-	-	-
WinCC flexible Runtime	2005	6AV6 613-1*A01-1CA0	X <sup>1)</sup>	X <sup>1)</sup>	(-)	-	-	-	-	-	-	-	-	-	-	-	-

**Note:** Further information on compatibility with WinCC flexible can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/22635649>

- <sup>1)</sup> not tested with STEP 7 V5.4+SP4 or higher
- <sup>2)</sup> only as of STEP 7 V5.4 SP1 or higher, not tested with STEP 7 V5.4+SP5 or higher
- <sup>3)</sup> only as of STEP 7 V5.4 SP3 or higher
- <sup>4)</sup> only with WinCC flexible 2008+SP1
- <sup>5)</sup> only as of WinCC flexible 2008+SP2
- <sup>6)</sup> only as of STEP 7 V5.4 + SP5 or higher
- <sup>7)</sup> only as of STEP 7 V5.5 + SP2 or higher
- <sup>8)</sup> only with WinCC flexible 2008 or WinCC flexible 2008+SP1